

# VINYL TO SD OR USB

Turn the TEAC On



Use Function/  
Rec level/Select  
until Phono is  
the highlighted  
input



Place the  
record  
on the  
turntable

Play the  
record



When you reach the  
point where you  
want your recording  
to begin, press  
Record

# RECORDING OPTIONS

You can split your recording into different tracks by clicking on Track Increment

To change the recording output press Menu: you can choose between SD or USB



You can adjust the recording levels

When done recording, press Stop